




Exterior Mirror Glass (76.11.08)

Removal

- 1 . Release the exterior mirror glass.

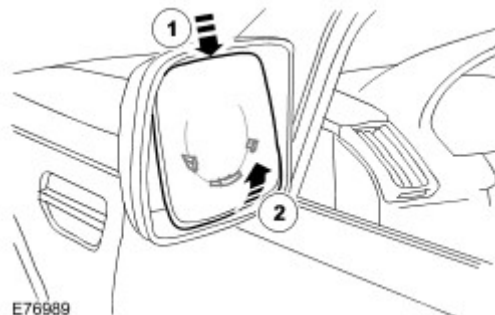

- 2 . Remove the exterior mirror glass.

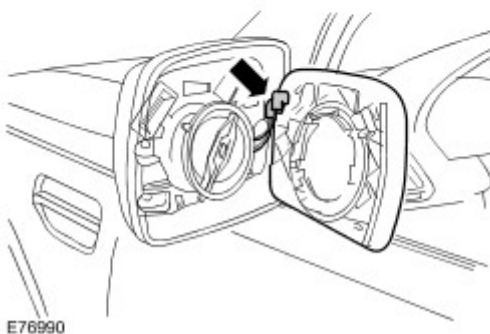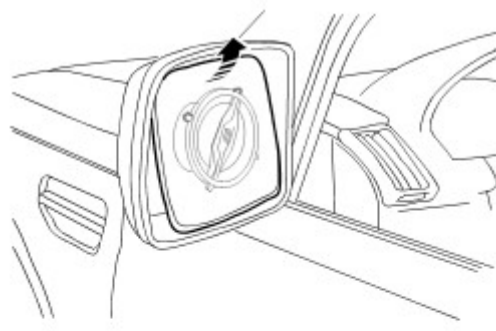

Installation

- 1 . To install, reverse the removal procedure.