


Anti-Theft - Active - Hood Switch

Removal and Installation


Removal

- NOTE: Removal steps in this procedure may contain installation details.

1. Torque: 10 Nm

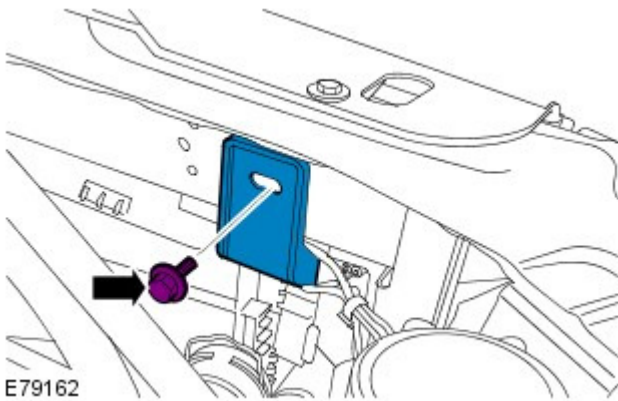

- 2.

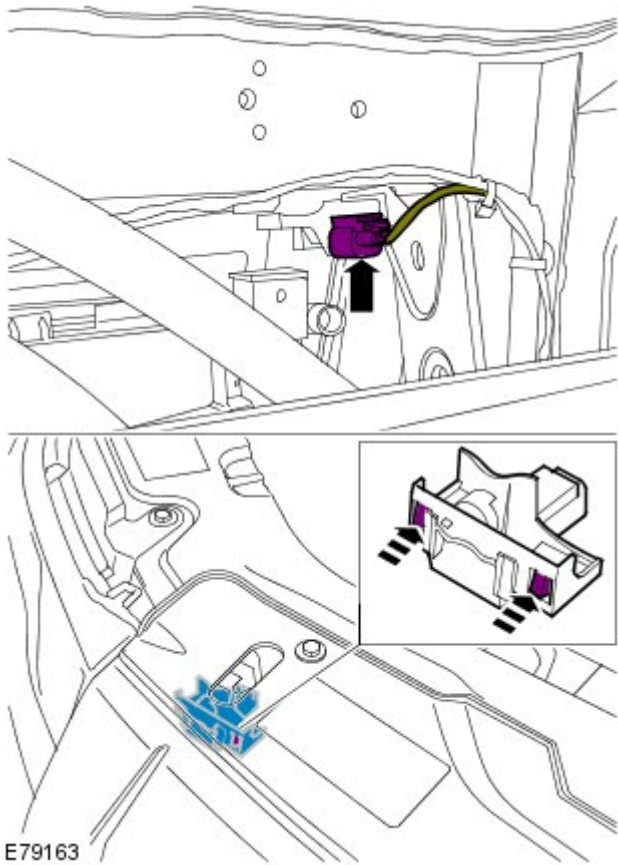

Installation

1. To install, reverse the removal procedure.