


Selector Lever Knob

Removal

1. Secure the gearshift lever boot, below the locking ring using either an elastic band or cable tie.
2. Rotate the boot and locking ring.



3.  **WARNING: The selector lever knob will be released suddenly, keep face clear during removal.**



Installation

1.  **CAUTION: Make sure that the selector lever and the gearshift mechanism are in the park (P) position.**

To install, reverse the removal procedure.