Published: Oct 18, 2006

Roof Opening Panel Blind

Removal

- 1 . Remove both A-pillar trim panels. For additional information, refer to <u>A-Pillar Trim Panel (76.13.26)</u>
- 2 . Remove both B-pillar upper trim panels. For additional information, refer to <u>B-Pillar Upper Trim Panel (76.13.28)</u>
- 3 . Remove both C-pillar trim panels. For additional information, refer to <u>C-Pillar Trim Panel (76.13.35)</u>
- 4 . Remove both D-pillar upper trim panels. For additional information, refer to <u>D-Pillar Trim Panel (76.13.73)</u>
- 5. Remove the interior rear view mirror. For additional information, refer to <u>Interior Rear View Mirror (76.10.51)</u>
- 6. Remove both sun visors.



7. Remove the 4 passenger assist handles.



8. Release the rear of the headliner.



9. Release the front door seals.



10 . Release the headliner.



11 . Close the roof opening panel blind.



12.

CAUTION: Do not allow the roof opening panel blind tube to rotate.



CAUTION: Do not release the metal pin from its locator until the locking pin is in place.

Carefully slide the roof opening panel blind tube to the right. Release the plastic pin from its locator.



13. Using a suitable pin (1 mm diameter), lock the roof opening panel blind.

Release the metal pin from its locator.



14 . Remove the roof opening panel blind.



Installation

1. Install the roof opening panel blind slider feet to the guides.

². CAUTION: Do not allow the roof opening panel blind tube to rotate until the plastic pin is secure in its locator.

Secure the metal pin to its locator. Remove the locking pin from the roof opening panel blind.

3. Carefully slide the roof opening panel blind tube to the right.

Align and secure the plastic pin to its locator.

4. Open the roof opening panel blind.

- 5 . Secure the headliner.
- 6 . Attach the front door seals.
- 7 . Attach the rear of the headliner.
- 8 . Install the passenger assist handles.
- 9. Install the sun visors.
- 10 . Install the interior rear view mirror. For additional information, refer to <u>Interior Rear View Mirror (76.10.51)</u>
- 11 . Install the D-pillar trim panels. For additional information, refer to <u>D-Pillar Trim Panel (76.13.73)</u>
- 12 . Install the C-pillar trim panels. For additional information, refer to <u>C-Pillar Trim Panel (76.13.35)</u>
- 13 . Install the B-pillar trim panels. For additional information, refer to <u>B-Pillar Upper Trim Panel (76.13.28)</u>
- 14 . Install the A-pillar trim panels. For additional information, refer to <u>A-Pillar Trim Panel (76.13.26)</u>