

Headlamp Adjustment

NOTE:

The headlamp setting is 1.2 % below horizontal and parallel.

NOTE:

NAS vehicles have vertical adjustment only.

1. Align the headlamp beam setting equipment to one headlamp.

2. Switch the headlamps on and to dipped beam.


3. **NOTE:**

NAS vehicles have vertical adjustment only.

Adjust the headlamps with an Allen Key.

Rotate the adjusters A and B by an equal amount for vertical alignment.

Rotate the adjuster 'B' for horizontal alignment.

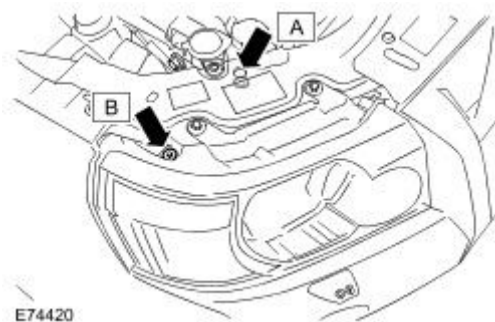

4. To adjust the second headlamp, repeat the above procedure.