

**Solution:**

- Remove the headlamps from the car
- Unclip the locking lever, press down the two tabs and remove the cover
- Locate the AFS stepper motor as per Figure 1 below

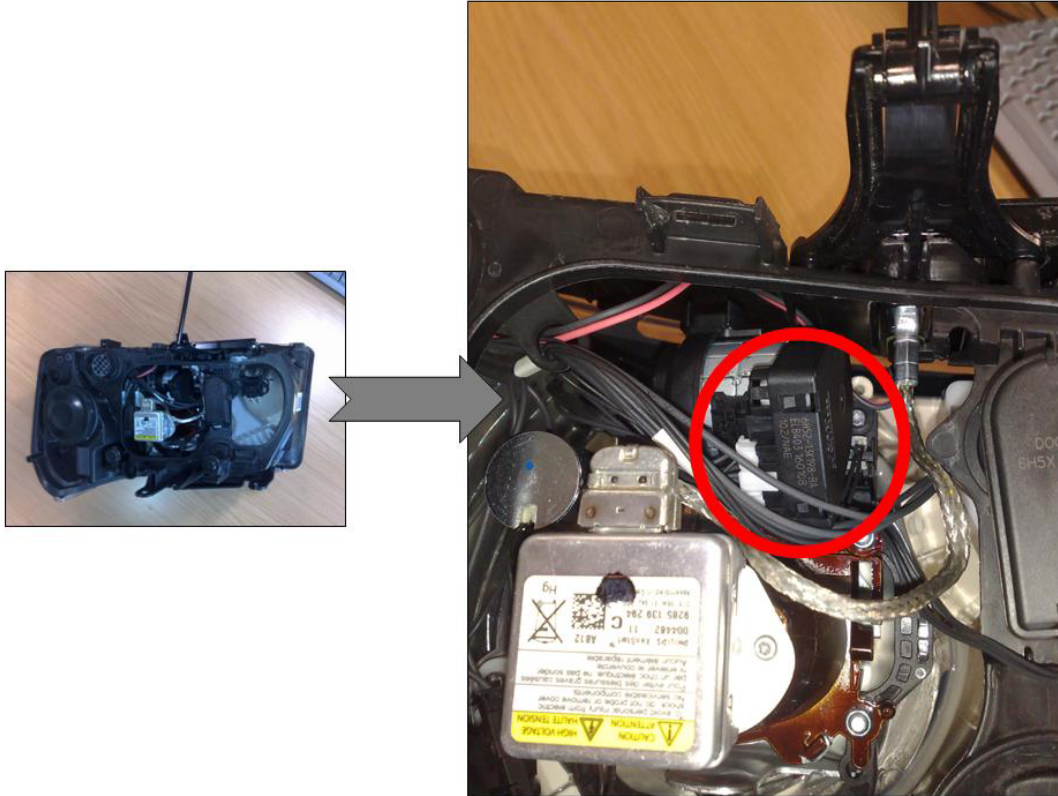


Figure 1

- Check the AFS stepper motor part details is at level NAC and has a white mark as per Figure 2 below

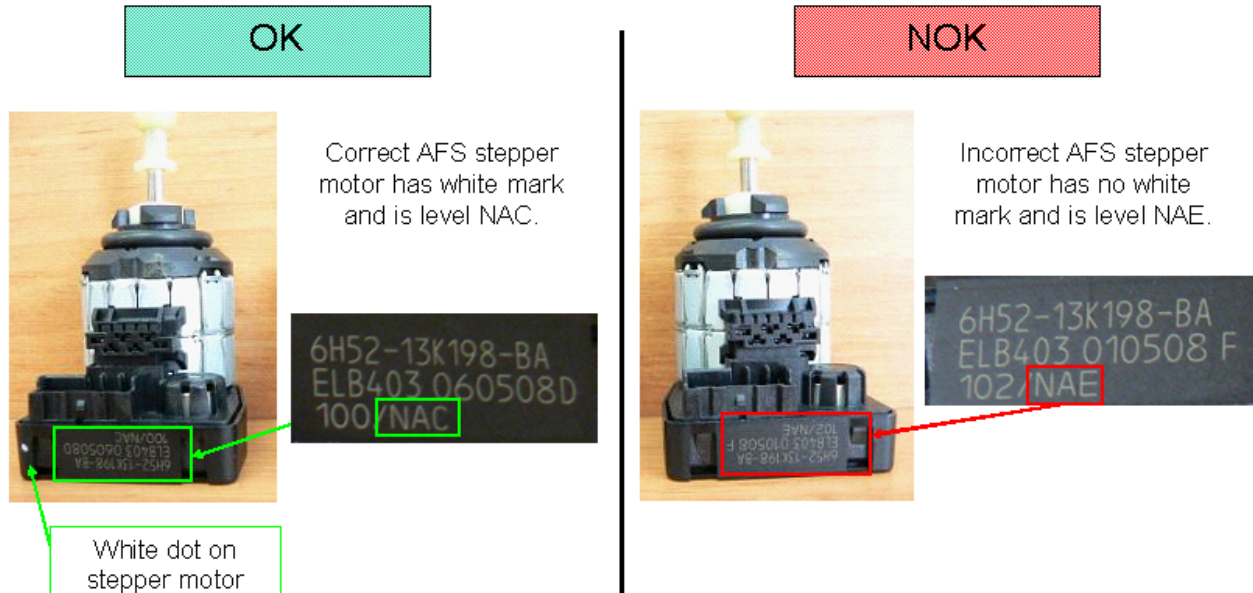


Figure 2

- If the headlamp(s) have a NAE level AFS stepper motor please replace the headlamp with latest level stock
- Inspect the new headlamp for correct level AFS stepper motor before fitting
- Read and clear DTCs from the Headlamp Control Module