

Published: Nov 24, 2006

Front Wheel Bearing (60.25.14)

Special Service Tools



204-348-01
Adapter for 204-348

205-802/5



205-802/5
Remover, Wheel Hub/Bearing

204-348/3



204-348/3
Remover/Installer, Wheel Hub/Wheel Bearing

204-528/1



204-528/1
Remover/Installer, Bushing

204-536/2



204-536/2
Remover/Installer, Bushing

Removal

NOTE:

The wheel bearing is supplied as part of the drive flange assembly.

1 .



WARNING: Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Remove the wheel knuckle.
For additional information, refer to [Wheel Knuckle \(60.25.01\)](#)

3. Position the wheel knuckle assembly in a press and support on special tool.
Special Service Tools : [Remover, Wheel Hub/Bearing](#)

Using the special tool, press the drive flange assembly out of the wheel knuckle.

Special Service Tools : [Remover/Installer, Bushing](#)

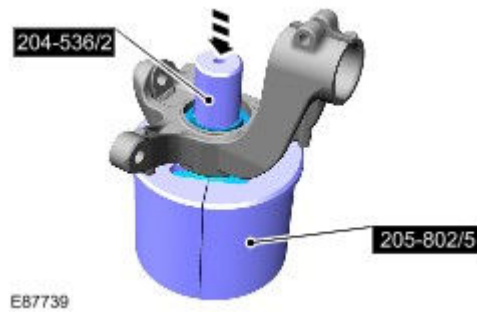

Installation

1.



CAUTION: Make sure that a new drive flange assembly is installed.


Position the new drive flange assembly in the special tools.

Special Service Tools : [Remover/Installer, Wheel Hub/Wheel Bearing](#)

Special Service Tools : [Adapter for 204-348](#)

Using the special tool, press the drive flange assembly into the wheel knuckle.

Special Service Tools : [Remover/Installer, Bushing](#)

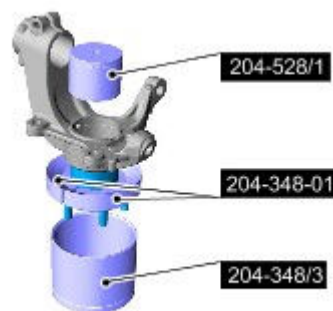

- 2 . Install the wheel knuckle.

For additional information, refer to [Wheel Knuckle \(60.25.01\)](#).