

Glow Plugs

Removal



CAUTION: Extreme cleanliness must be exercised when handling these components.

NOTE:

The TD4 engine cylinders are numbered from the rear of the engine (transmission end). Therefore, Number 1 cylinder and number 1 injector are located at the rear of the engine.

NOTE:

Removal steps in this procedure may contain installation details.

- 1 . Disconnect the battery ground cable.
For additional information, refer to [Specifications](#)

2 .



WARNING: Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

- 3 . Remove the intake manifold.
For additional information, refer to [Intake Manifold \(30.15.02\)](#)

4 .




CAUTION: Make sure that the area around the component is clean and free of foreign material.



CAUTION: Make sure that all openings are sealed. Use new blanking caps.

Torque:
10 Nm

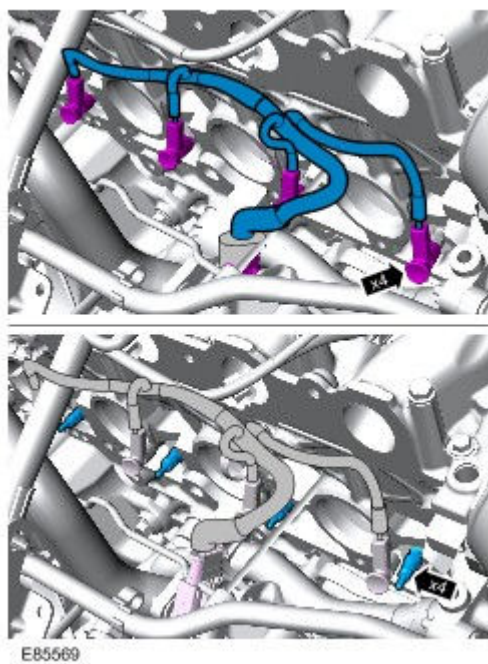

Installation

- 1 . To install, reverse the removal procedure.