


## Rear Drive Axle/Differential - Differential Draining and Filling


### General Procedures

1.  **WARNING:** Make sure to support the vehicle with axle stands.

-  **CAUTION:** Make sure the vehicle is on a flat level surface.

Raise and support the vehicle.

2. No provision is made to fully drain the rear differential. During repair procedures, fluid will be lost. A container should be positioned to collect any spillage.

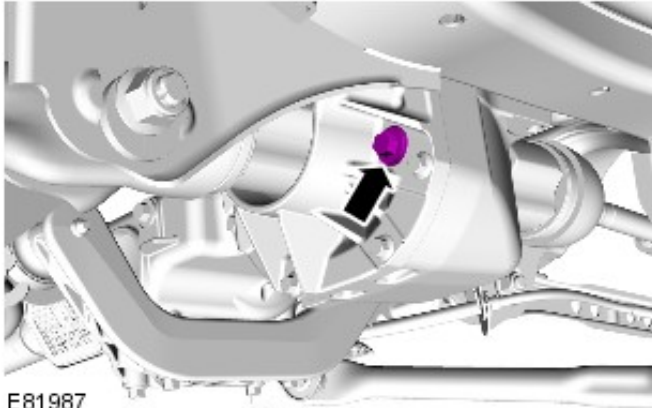

3. Make sure the vehicle is level. Remove the rear differential filler plug and discard the sealing washer.
4. Fill the rear differential, until a thin thread of fluid runs from the filler hole.

Refer to: [Specifications](#) (205-02 Rear Drive Axle/Differential, Specifications).

5. Using a new washer, install the drain plug.

*Torque:* 35 Nm

6. Lower the vehicle.