



E87034

Item	Part Number	Description
1	-	O-ring
2	-	Oil cooler
3	-	Oil filter housing

The oil filter and cooler assembly is located at the front of the LH side of the cylinder block. The oil filter housing contains a separate single oil filter element. The oil filter supplies clean oil to the [oil cooler](#), which is connected to the coolant system, and is further distributed to the various engine systems (For more information refer to the lubrication section).