



E87039

| Item | Part Number | Description |
|------|-------------|----------------|
| 1 | - | CKP sensor |
| 2 | - | Sensor bracket |

The Crankshaft Position (CKP) sensor is located at the rear of the intake side of the cylinder block. The sensor provides an input of engine crankshaft speed and position. The sensor works on the principle of the Hall effect and scans a trigger wheel (magnetic disc) on the flywheel

For additional information, refer to: [Electronic Engine Controls](#) (303-14A Electronic Engine Controls - I6 3.2L Petrol, Description and Operation).

Knock Sensors