
## **Installation of Monitor for Freelander 2**

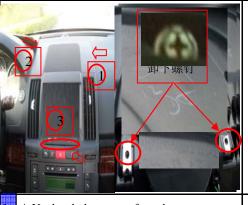

A.Unclench the cover of speaker.
B.And then take out the plastic sheet.
C.Finally, get out of screws.



A.Cover the head of gearlever firstly;
B.Hold the central control panel to take out the frame.



Pull out the central control panel as the picture show



Take out the screws on the left of CD changer and air conditioner.



Take out the screws on the right of CD changer and air conditioner.



Pull out the CD changer & air conditioner & power wiring harness as the picture shows.




Take out the panel of air conditioner as shown on the picture.



8. Unclench and pull up the cover of gear lever




Take out screw highlighted with red frame

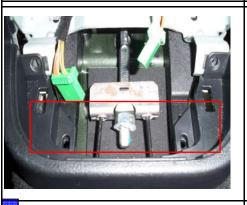

10. Firstly, Take out the cover of as well as its screws;

Secondly, take out the big frame shown on the picture and pull out the wiring harness.

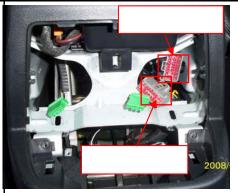


Connect the power wiring harness to the original power out wiring harness as shown on pictures.



12. Put the wiring harness of monitor through the bottom and then fix the gear lever back





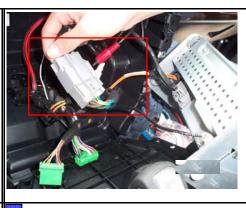

Connect the AUX OUT wiring harness as picture show







16. Unclench the right side grid cover

17. Fix the antenna of GPS on the foam

Take out the cover of air outlet of air conditioner; Put the antenna of GPS in the central control station Fix the grid cover of speaker back.

装喇叭弹片






Fix the secure device of speaker as ne picture show

Fix speaker into the hole on the centrol control

Screw and fix the speaker



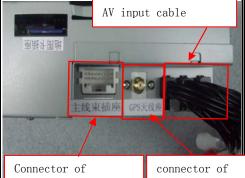



Firstly, Connect the wiring harness of original CD changer & air

Secondly, fix & screw the CD changer

23. Insert the relativtive all these wiring harnesses into the monitor

24. Connect the AV cable



Take down the protection film.

Fix the monitor as the picture shows



**20**. Fix &screw the securing device of monitor.



Connect the flat cable to key control box corretly and then fix the key control box.



Close the unclenched cover of speaker to finish the assemble of monitor



If you need take out the key control box, please press the box gently from up to down.

## **Installation of Camera (CCD)**




Bore a hole in the bumper, whose diameter is  $\Phi$  10MM




Dismount the right rear taillight as the picture shows



Fix the Camera on bumper and connect with camera connecting wiring harness

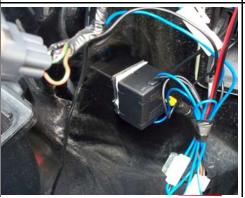

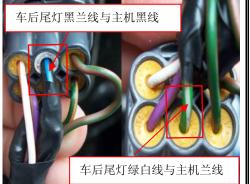



4. Fix the filter box on the right rear taillight & connect with connecting wiring harness	Note: Connect the black cable of rear taillight with the black cable of monitor.  Connect the green & white cable of rear taillight with the blue one of monitor.  Enwrap the cable "B+" with tape from touching with others	6. Fix the CCD cable on the socket of real taillight and enwrap the cable with electrical tape as shown on the former step
Fix the connecting wiring harness on	Put through the wiring cable from the	The picture of camera connecting wiring
rear box of car as the picture shows  Put the camera connecting cable	right side of rear box as the picture shows	harness
through along the right door as the picture	The position to fix the camera connecting cable	Put the cable through the assistant driver seat as the picture shows
shows		E.T. C. Sout as the picture shows
The parking sensor is assembled then		

## The scketch to connect all accessories



As the step 15: insert the AUX OUT wiring harness

The audio wiring harness



Step 19-21, speaker of central control station



Step 23:connect antenna of GPS

GPS Antenna



Step 11: insert power wiring harness

Power wiring harness




Step23-26: Fix the monitor




Step 13: Connect the hand brake cable

Step 25: fix Securing device of monitor



lamera connecting wiring harness



Step 23:Insert the socket of wire harness of monitor

Monitor



Step 1-4:assemble of camera

Camera

Plug of wiring harness of monitor