

Published: Aug 15, 2007


Parking Brake Cable Adjustment (70.35.10)

1. Apply the parking brake lever one click at a time and count the number of clicks required to apply the brakes firmly. The brakes should be firmly applied between 3 and 9 clicks.


2.



3.

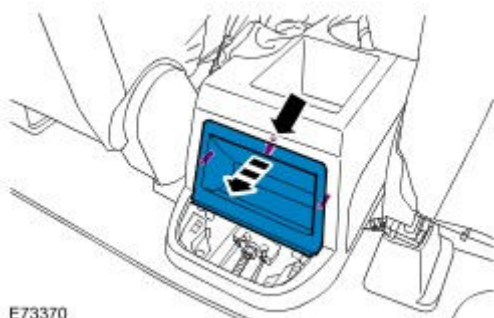

4. With the parking brake lever fully lowered, release the parking brake cable adjustment.

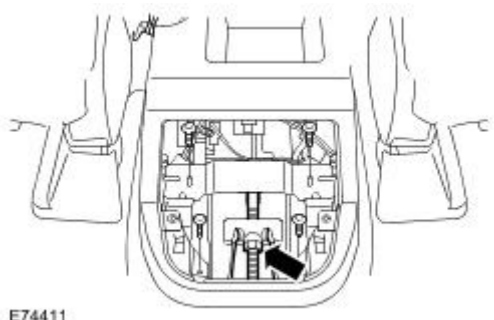

5.



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.



6. Remove the rear wheels and tires

[Wheel and Tire](#)

7. **NOTE:**

Apply the parking brake control lever several times to centralize the brake shoes.

Rotate the parking brake adjuster until the disc cannot be turned, then back the adjuster off 8 clicks.

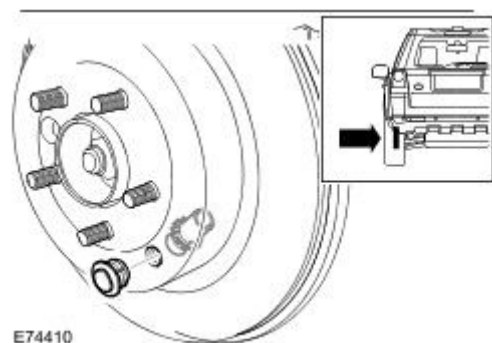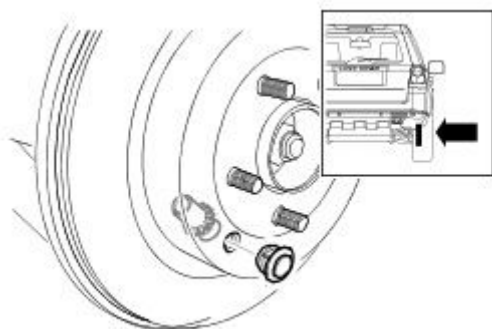

E74410

8. Repeat the above procedure for the other side.

9. Adjust the parking brake front cable to give a parking brake lever travel of between 3 and 9 clicks, to firmly apply the brakes.



E74411

10. Install the coin tray and stowage compartment.

11. Install the rear wheels and tires.

Wheel and Tire

12. If necessary, carry out the parking brake shoe bedding-in procedure.

[Parking Brake Shoes Bedding-In \(70.40.12\)](#)